


# AHS

## HVAC Thermostat Operation



# Thermostat Display Options

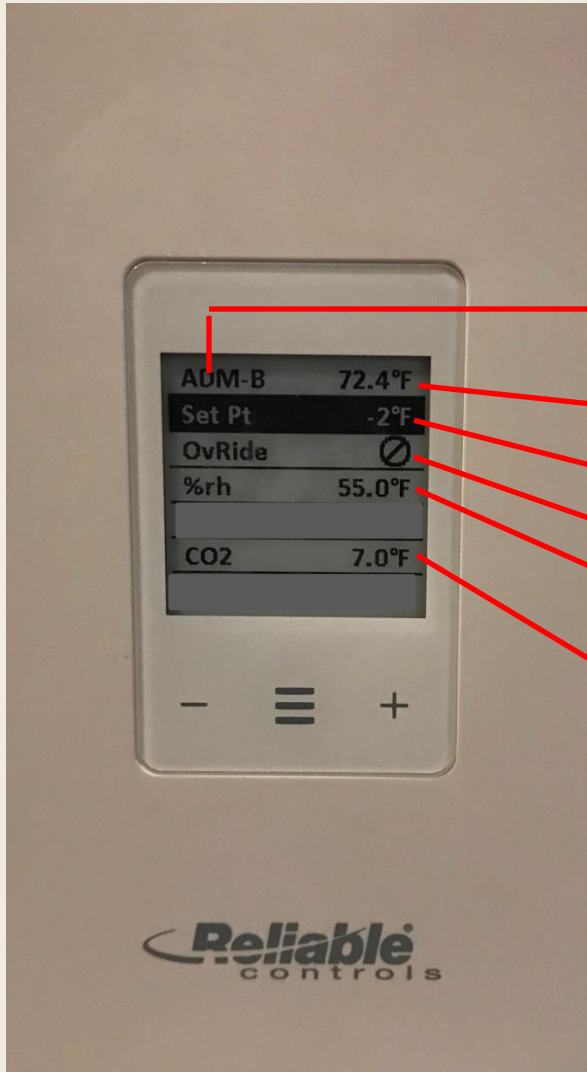

Area/Room Number

Room Temperature

Set Point Adjust

After Hours Override

Room Humidity

Room CO2



# Temperature Adjust

The district standard set point is 74 degrees with a 2 degree warmer or cooler comfort adjustment option.

To adjust your set point start on the main display page and use the – or + buttons.



Adjustment Buttons

# After Hours Override

- The HVAC units follow a schedule to operate Monday – Friday 6:30am to 4:30pm.
- The override temporarily occupies your room for 2 hours at a time. It does not change the temperature set points.
- If heat or air is needed for an after hours event contact your campus secretary
- To override air outside of normal hours press the ( ≡ ) then use the ( ≡ ) button to scroll and highlight the override option
- Use the ( + ) button to select between override on or off.

